

## **Inner Tube Replacement Instructions**

1. Deflate tire by pushing in pin on the tire.
2. Once deflated, remove tread from the wheel axel.
3. Remove the inner tube from inside the tread.
4. Place new inner tube inside the tire so that the pin is protruding.
5. Place tread and inner tube back on the axel.
6. The pin should go through the axel.
7. Attach tire pump and re-inflate tire.